H624 - Heckler Camera Shelf


for Monitor Arms


Designed & made in Arizona Patented



IN THE BOX

- (A) 1 x Heckler Camera Shelf
- **B** 4 x M4 assembly screws
- **©** 2 x 1/4"-20 mounting screws
- **• 4 x** Mounting spacers

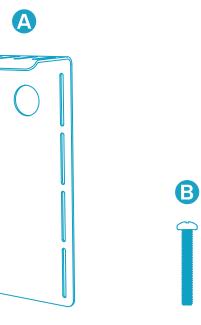

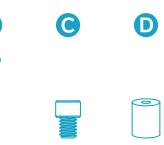


If you have any questions, please contact service@hecklerdesign.com.

TOOLS NEEDED




Philips-head Screw Driver

COMPONENTS NEEDED (Not Included)

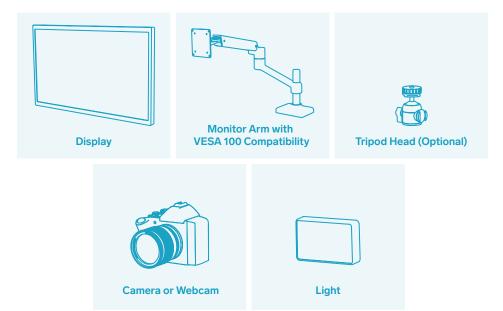





Prep your gear.

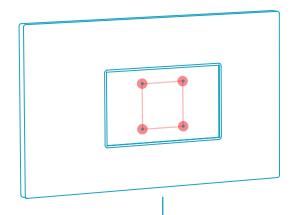

 Expose the mounting holes on your display. Test fit the supplied M4 screws to ensure compatibility.



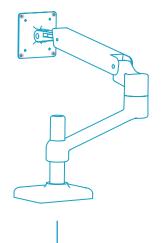


Check your monitor arm for VESA 100 compatibility.

Decide to install your Camera Shelf facing forward or backward.




Camera Shelf facing forward

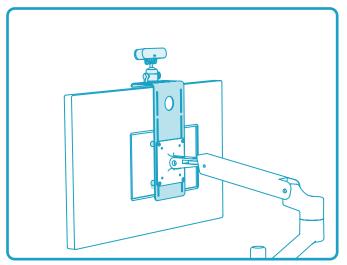


The forward position is ideal when mounting smaller cameras such as Logitech BRIO and Huddly IQ.



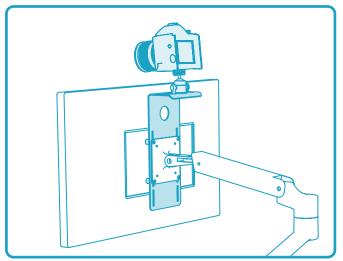

The backward position is ideal for mounting cameras with long lenses.

Fasten Camera Shelf between your display and monitor arm.

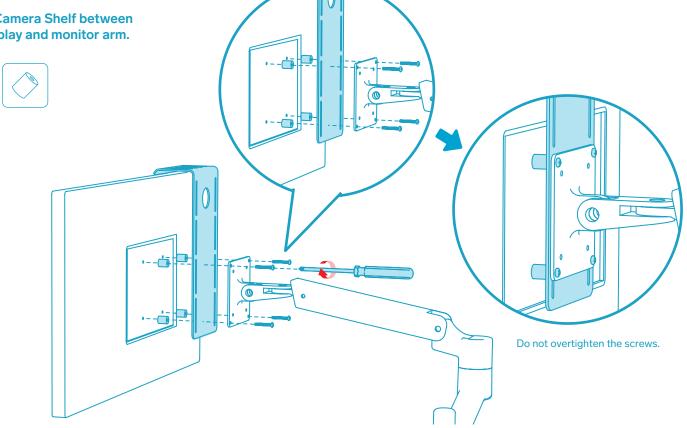


Install cameras, llights, and other gear.



Hint: Loosen the assembly screws to enable you to slide the Camera Shelf upward to gain access to camera-mounting screws.

Tip: Small tripod heads (sold seperately) are ideal for positioning your camera and lights.

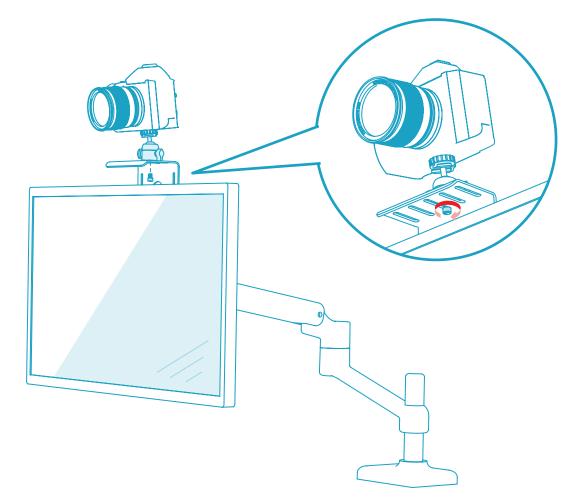

Lower Camera Shelf to its final location.

Once the Camera Shelf is in its final position, fully fasten the assembly screws. Do Not Overtighten the assembly screws.


ത

თ

Ø

0

Route your cables.

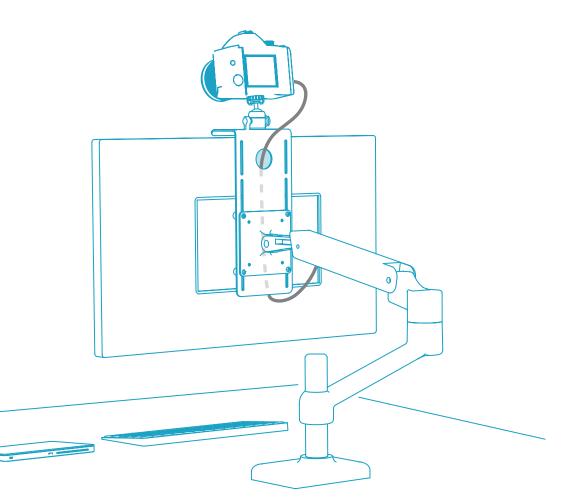


H625 - Heckler Camera Shelf XL

for Monitor Arms



Designed & made in Arizona Patented

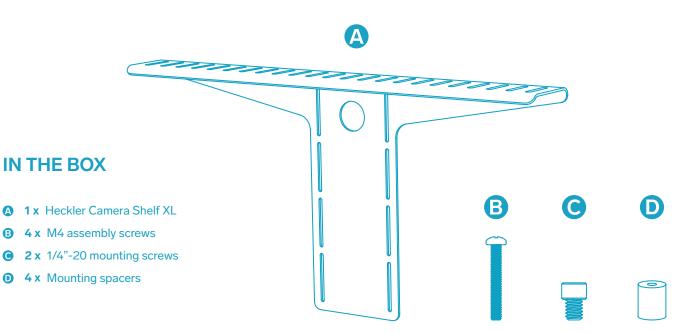

Δ

8

С

D

TOOLS NEEDED




Philips-head Screw Driver

COMPONENTS NEEDED (Not Included)






Prep your gears.

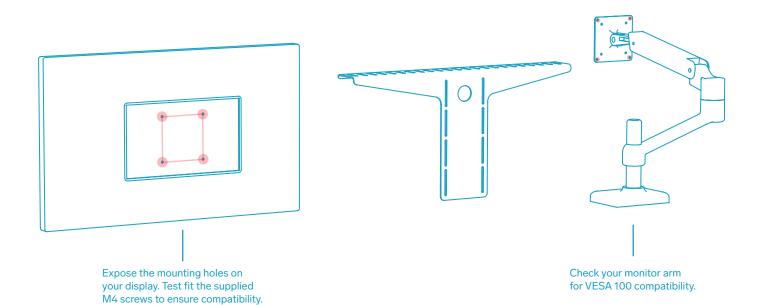

Decide to install your Camera Shelf facing forward or backward.




Camera Shelf facing forward

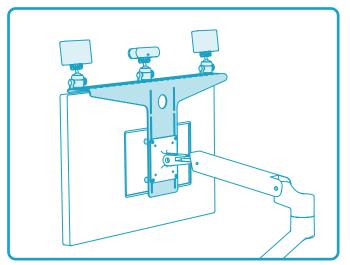


The forward position is ideal when mounting smaller cameras such as Logitech BRIO and Huddly IQ.

B Camera Shelf facing backward

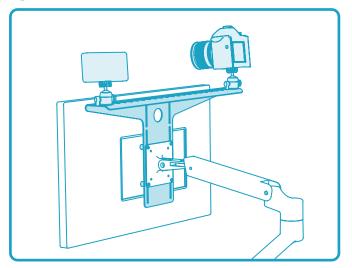

The backward position is ideal for mounting cameras with long lenses.



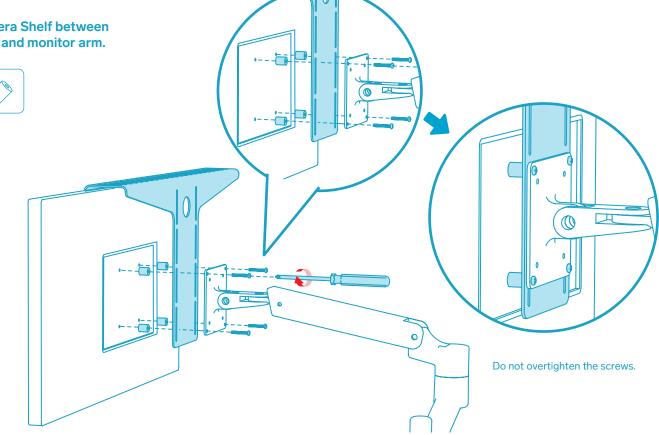



Install cameras, llights, and other gear.



Hint: Loosen the assembly screws to enable you to slide the Camera Shelf upward to gain access to camera-mounting screws.

Tip: Small tripod heads (sold seperately) are ideal for positioning your camera and lights.

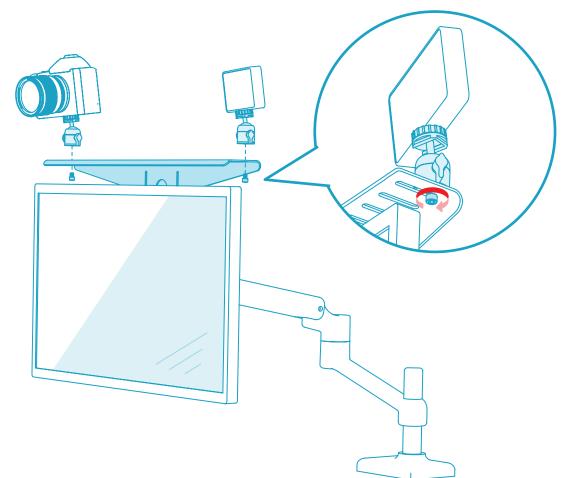

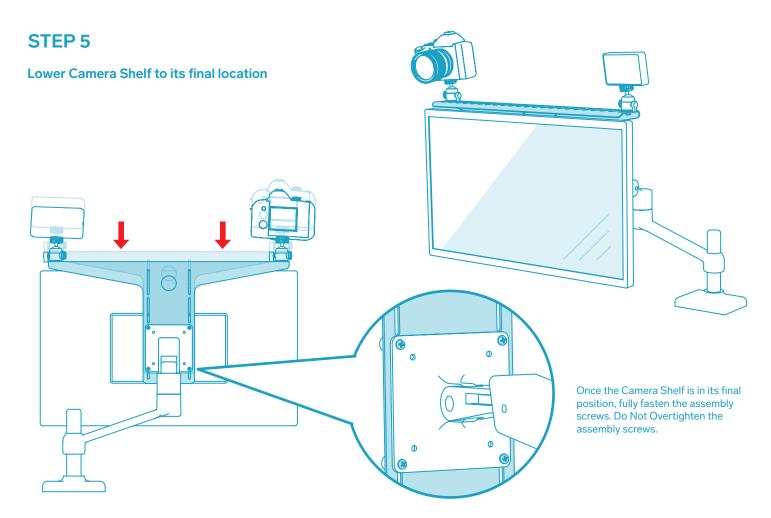

Route your cables.

